

Spureinstellungsdaten für BNR32 und HCR32

This is a listing of the BNR32 Skyline GT-R factory alignment specs:

Angle	Minimum	Preferred	Maximum
Left Front Caster	2° 55'	3° 40'	4° 25'
Right Front Caster	2° 55'	3° 40'	4° 25'
Caster Side-Side			0° 30'
Left Front Camber	-1° 40'	-0° 55'	-0° 10'
Right Front Camber	-1° 40'	-0° 55'	-0° 10'
Camber Side-Side			0° 30'
Left Rear Camber	-1° 35'	-1° 05'	-0° 35'
Right Rear Camber	-1° 35'	-1° 05'	-0° 35'
Front Toe	0° 00'	0° 08'	0° 17'
Rear Toe	0° 00'	0° 17'	0° 34'
Diameter Ref	16		
Left S.A.I.	15° 25'		
Right S.A.I.	15° 25'		
Angle	Turn In Angle	Turn Out Angle	
Left Front	38° 00'	32° 00'	

This is a listing of the HCR32 Skyline GTS-T factory alignment specs:

Angle	Minimum	Preferred	Maximum
Left Front Caster	5° 45'	6° 30'	7° 15'
Right Front Caster	5° 45'	6° 30'	7° 15'
Caster Side-Side			0° 30'
Left Front Camber	-1° 35'	-0° 50'	-0° 05'
Right Front Camber	-1° 35'	-0° 50'	-0° 05'
Camber Side-Side			0° 30'
Left Rear Camber	-1° 25'	-0° 55'	-0° 25'
Right Rear Camber	-1° 25'	-0° 55'	-0° 25'
Front Toe	0° 00'	0° 08'	0° 17'
Rear Toe	0° 00'	0° 17'	0° 34'
Diameter Ref	16		
Left S.A.I.	12° 50'		
Right S.A.I.	12° 50'		
Angle	Turn in Angle	Turn Out Angle	
Left Front	38° 00'	32° 00'	
Right Front	N/A	N/A	
Rear	N/A	N/A	